


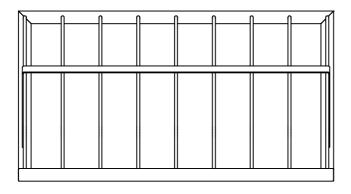



Mini goal



SOLE030.138




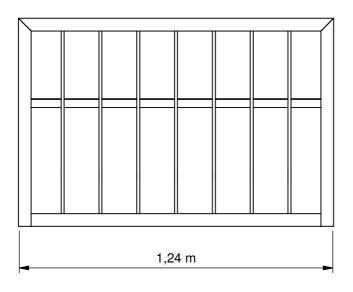

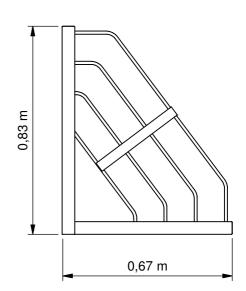




Benaming VOETBALGOAL		TOE	CUI	0.50	120
Opmerking Comment MINIGOAL	Tekening Drawing	, I UE	JUL	USU	T 2 0
Datum 15-5-2006			P	Afmetina	en Dimer

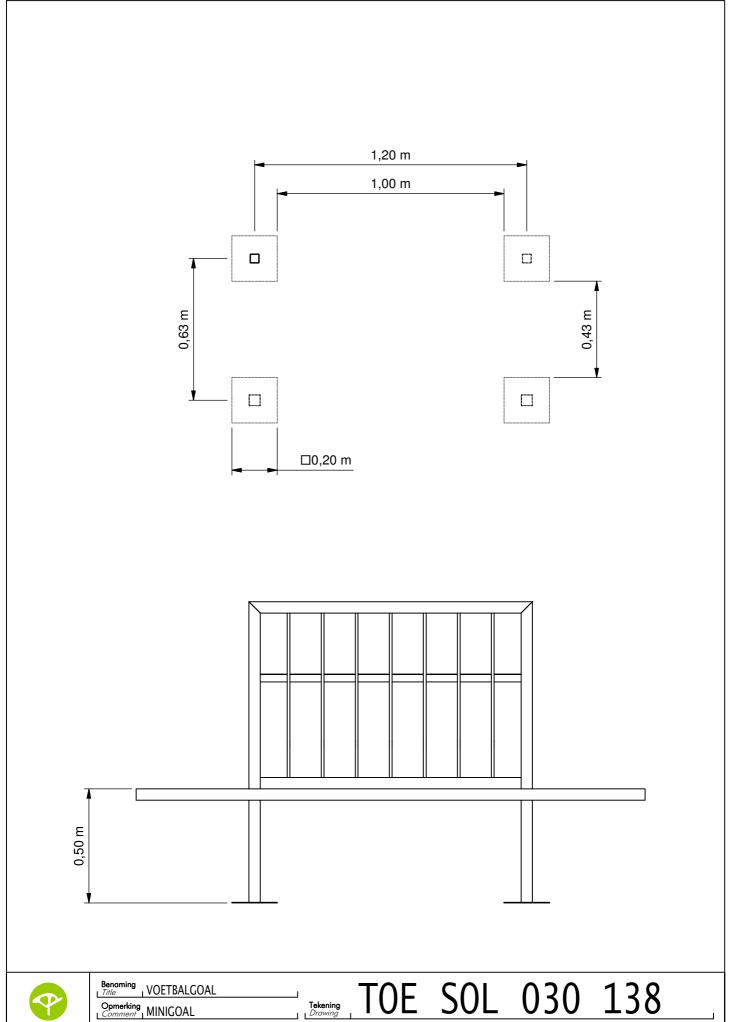



5-5-2006

Bodemplan Groundplan

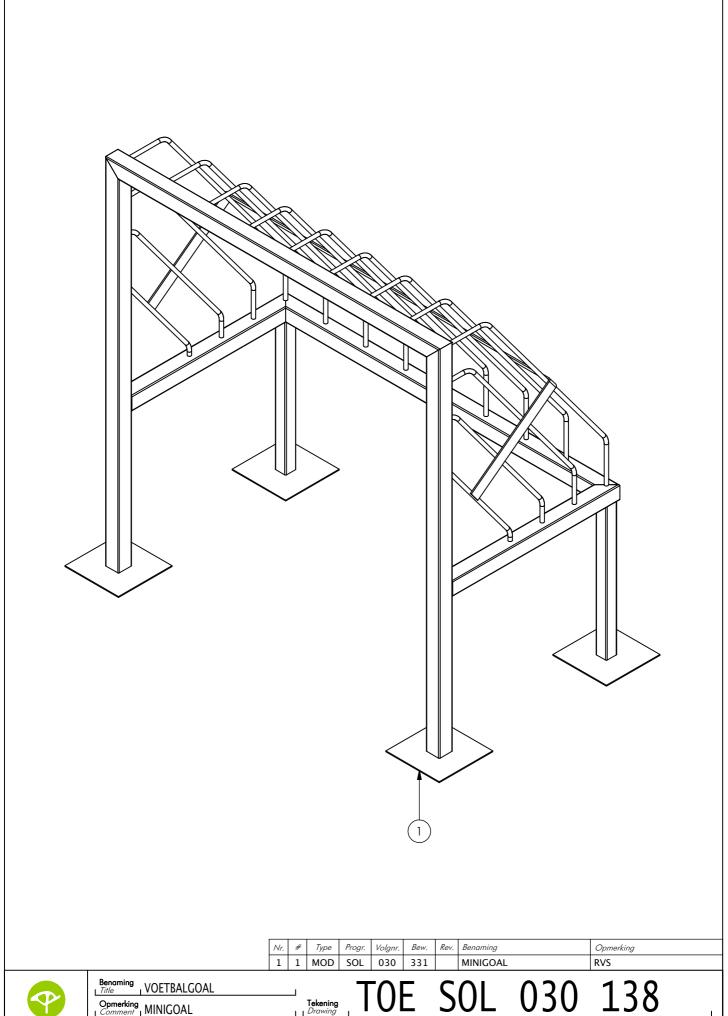

Modules *Modules*



5-5-2006

SOLE030.138

Mini goal

Type indication

LOGBOOK

(Onderstaand logboek kan gebruikt worden om te voldoen aan de eisen, gesteld in artikel 14 van het Warenwetbesluit Attractie- en Speeltoestellen)

Sports equipment

Product code	SOLE030.138
Name of equipment	Minigoal RVS met grondankers
Maximum height of fall	n.a.
Year of construction	2017
Certificate	0183402366
inspection authority	NVT
	-
Name manufacturer	BOERplay Hyacintstraat 2 - 4255 HX Nieuwendijk Phone: +31 (0)183 40 23 66 Fax: +31 (0)183 40 35 64
name installer	
Description of equipment	Mini goal
Location of equipment	
Data about the owner of the Name:	play equipment
Address:	
Postcode and town:	
Contact person:	
Telephone number:	
Data about the administrator Name:	of the play equipment
Address:	
Postcode and town:	
Contact person:	
Telephone number:	

LOGBOOK



Inspection and maintenance intervals

Nr.	Inspection	Maintenance	months between inspections
1	Verify equipment's stability, junctions and missing parts. Inspect bolts, screws and nuts for absence, jams, corrosion and wear.	Add missing parts, secure joints, apply missing fixing agent and replace corroded parts.	1
2	Check suspension for wear.	Replace worn parts and/or remove non-functioning parts.	1
3	Inspect rotating parts such as hinges, rolling-element bearings, etc. for wear and acceptability.	Replace worn parts and/or remove non-functioning parts.	1
4	Check wood for splinters, unacceptable damage and signs of rot. Especially at ground level.	Repair damage. Replace affected wood. Smoothen splintered wood and sharp edges.	1
5	Inspect foundation for stability, tearing and coverage.	Restore foundation and covering material.	3
6	Examine rubber and synthetic parts for wear, damage and break.	Replace original parts.	3
7	Inspect metal for corrosion and damage in the coating.	Restore any damaged coating (after removing rust and applying primer).	6
8	Check ropes, cables, chains and nets for wear and damage. Steel cables and nets which are tensioned must be checked for tension.	Replace parts where necessary. Steel cables and nets must be tensioned.	3
9	Inspect equipment for unsafe changes and additions.	Remove unsafe additions and correct unsafe changes.	1
10	Inspect safety surfaces.	Restore and repair where necessary.	1

Remarks

- 1. If used intensively, all points require extra attention.
- 2. Extreme weather conditions and locations may require a higher inspection frequency. Discuss this with the supplier.
- 3. Vandalism-sensitive locations require stricter inspections, possibly daily.
- 4. Check the terrain regularly for items that do not belong there, are unsafe or may be used wrongly. Examples are poisonous plants, glass shards, etc. Frequency depends on strain.
- 5. Remember that bad maintenance leads to unsafe conditions and notably faster impoverishment of the playground area.
- 6. Replacement parts can be ordered at the manufacturer with the part numbers on the module drawing. Drawings can be found in de user guide.
- 7. The impact area shall be provided with impact attenuating surface according to the specified falling height.
- 8. This list is conform the CEN-standard "playground equipment and surfacing NEN-EN 1176-7".






Dit toestel is geen speeltoestel conform het warenwetbesluit attractie- en speeltoestellen, en is dus niet als zodanig gecertificeerd.

This equipment is not playground equipment, so it has not been certified as such.



e de

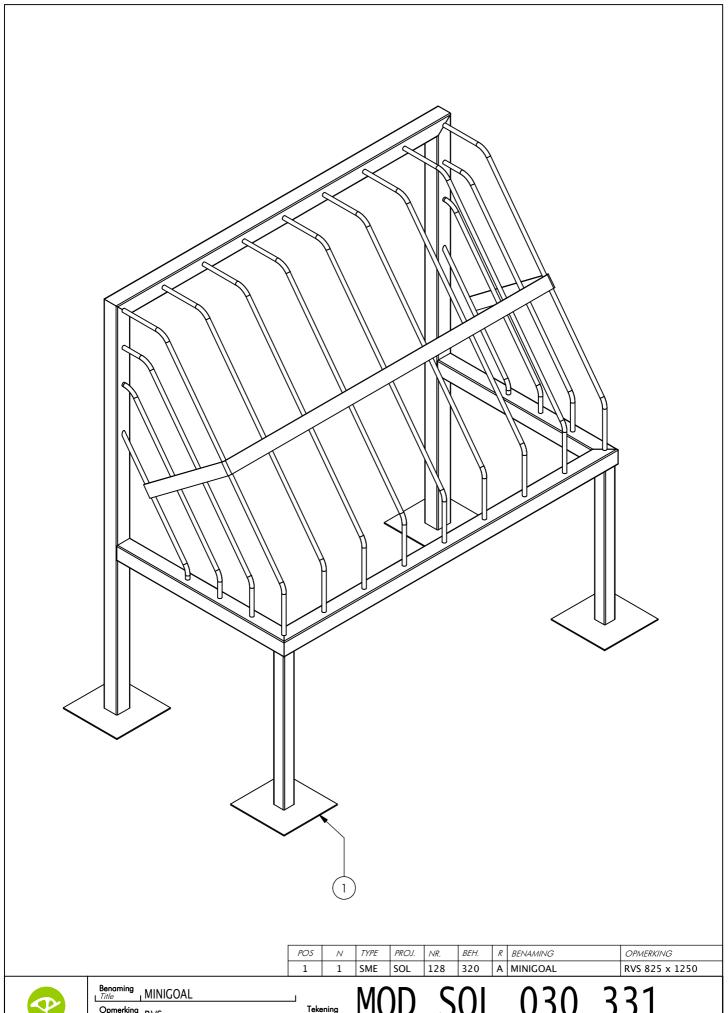



Tekening Drawing 6-4-2006

Samenstelling module Assembly module